

## Important Safeguards:

Keep out of reach of infants and small children. There is a risk of injury.	<b>Do not heat in a microwave.</b> Doing so may cause sparks or deform or discolor the bottle.		
Do not use if water enters the interior of the Vacuum Layer. If the internal water seeps out, drinking it may cause illness.	Do not place near open flames (from gas stoves, etc.), on top of electric heaters or IH hot plates, or other IH cooking devices. Doing so may cause a fire or malfunction.		
Vacuum Layer	Please avoid filling the bottle with the following: Dry ice and carbonated drinks: The pressure inside the Main Body may cause contents to spill out, resulting in injuries and damage to		
<ul> <li>Scalding.</li> <li>Accidental ingestion may cause scalding or choking.</li> </ul>	<ul> <li>Dairy products and fruit juice:</li> <li>If left inside for a long period of time,</li> </ul>		
Do not place near heat sources such as gas stoves, ovens and heaters. Doing so may cause deformation or discoloration.	contents may spoil and produce gas that raises the pressure inside the Main Body, causing contents to spill out or the Stopper Set to burst,		
Do not drink out of the bottle while driving. Doing so may stain the interior of the car or clothes. Attempting to use while driving may distract the driver and may lead to serious accidents.	resulting in injuries. <b>Liquids containing salt such as</b> <b>soup:</b> Athough the liner is made of 18/8 stainless steel and is nonstick coated, salt may cause rust resulting		
Do not press the Button while the bottle is close to your face. The Straw or the Lid may pop up and hit your face and could be dangerous.	<ul> <li>in loss of cold retention.</li> <li>Fruit pulp and tea leaves: May become caught in the Stopper and cause contents to spill.</li> </ul>		
Do not hold or carry the bottle by the Stopper Set, Button Cover, Lid, or Straw. Fingers may become pinched or you may drop the bottle, causing injuries. In addition, the Lid, Button Cover, or Straw may become damaged.	Consume beverages within the same day. Not doing so may cause spoilage. In addition, if left inside for a long period of time, spoiled beverages may produce gas, raising the pressure inside the Main Body and causing the Stopper Set to burst or beverages to spill. This may result in injuries and damage to the Stopper Set.		
Do not disassemble the Main Body.			

 Please follow these instructions to prevent deterioration and discoloration of beverages, as well as malfunction and staining of the product.

Do not play or engage in activities with the Carrying Strap of the Tote wrapped around your neck, and do not hang the bottle by the Carrying Strap.	Do not use the Tote or Carrying Strap if torn or frayed. Depending on the location of the tear or fray, there is a risk of the product (Main Body) dropping.	
Doing so may cause a suffocation hazard.	When you use the Tote, do not let the Carrying Strap come in direct contact with your bare skin. It may chafe against your skin, causing an injury.	
Do not swing the bottle by the Carrying Strap of the Tote. Doing so may cause injuries or damages.		

### Warnings and Cautions:

Do not attach parts other than those specifically designed for this product. Doing so may cause leaks or breakage.	Always clean thoroughly after use. Failing to do so may cause malfunctions such as rusting or perforation, or cause contents to spoil. Do not remove the sticker on the bottom of the Main Body. Doing so may cause malfunctions such as rusting or perforation.	
Leave 1cm (1/2-inch) room on top when filling the bottle. Overfilling may cause contents to overflow when the Stopper Set is attached. Beverages may also leak out. Beverage Level		
Leave 1cm (1/2-inch) space Inside the Main Body	Sticker	
Avoid dropping or hitting against hard surfaces. Damage to the plastic or stainless steel surface of the bottle may reduce its ability to retain cold.	Do not damage the nonstick coating inside the Main Body. Scratches may cause rust, holes or other problems.	


## Warnings and Cautions: continued

<b>Do not force large ice cubes in.</b> Forcing or hitting the ice cubes may cause deformation, leaks, or malfunction.	Do not tilt the Main Body when the Lid is open. Leakage may stain clothing.	
Always clean the Stopper Set (Lid, Stopper, Stopper Gasket, Straw Set, Straw Stopper, Tube, and Tube Tip) thoroughly after use. Not doing so may cause decay, mold, odor or discoloration. It may also cause leaks.	Store the Bottle upright when carrying inside bags to prevent beverages from spilling.	
Use only with the Stopper Set securely attached. Always close		
the Lid and Button Cover after use. Leaks may cause stains on your car, clothes, bags, etc.	Do not rub the design on the outside of the bottle strongly. Doing so may cause the design to come off.	
Do not place cans, bottles, etc. inside the Main Body. These may deform or damage the Main Body.	Store the Tote in a well-ventilated place when you are not using it. High humidity may cause the fabric to wrinkle. Do not wash the Carrying Strap of the Tote. The Reflector may come off or	
Do not let small children bite or chew on the Straw. This may deform the Straw, resulting in leakage.		
If the product is filled with a cold	deteriorate.	
beverage under humid conditions, condensation may form on the Stopper Set. Stand the product upright when placing it in bags.	Never leave the Carrying Strap of the Tote in a wet state. If you leave the Carrying Strap soaked with rain or water, the Reflector may deteriorate. Dry it off immediately by wiping it, etc. When wiping, be careful not to rub it forcefully.	
Always make sure that the Straw Set, Stopper, Stopper Gasket, Tube, Straw Stopper, and Tube		
Tip are attached. Leaks may cause stains on your car, clothes, bags, etc.	Do not rub the reflector forcefully. Its reflective properties may deteriorate.	


The illustrations used in this instruction manual may vary from the actual product you have purchased.

## How to Use:

- Do not attach or remove the Stopper Set under the following conditions:
- With the Tote attached
   With the Lid or Button Cover open
- While holding the Button Cover

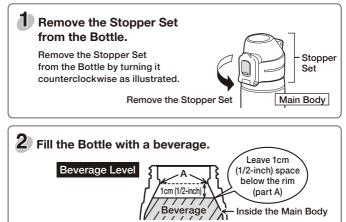


For better performance with cold beverages, precool the Main Body with a small amount of cold water for about one minute.

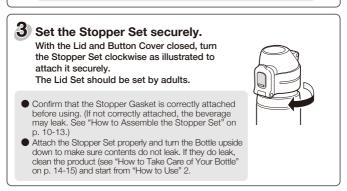


Follow the instructions for care and wash the Stopper Set, the inside and outside of the Main Body thoroughly before use.


When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.

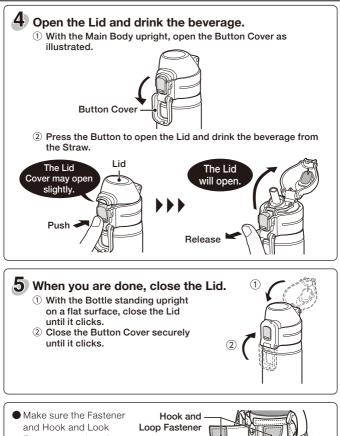

- 6 ---

Fastener are closed securely when using.

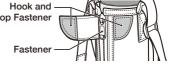

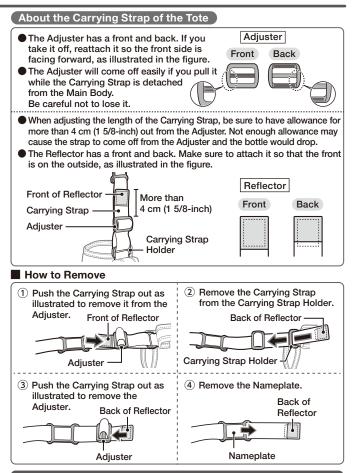


To attach, perform the removal procedure in reverse.

#### — 7 —

## How to Disassemble the Stopper Set


See p. 10-13 for how to assemble.

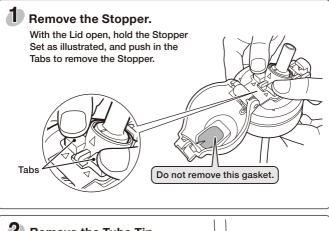

## **2** Remove the Tube Tip.

Turn the Straw Stopper as illustrated to remove the Tube Tip.

Be careful not to lose the Straw Stopper or the Tube Tip.

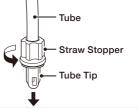

## **3** Remove the Straw Stopper.


While pushing the end of the Straw, turn the Straw Stopper as illustrated to remove it.


Be careful not to lose the Straw Stopper.




-8-


### How to Disassemble the Stopper Set continued

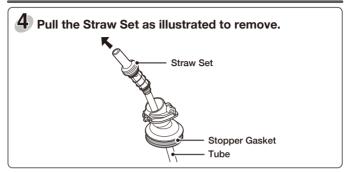


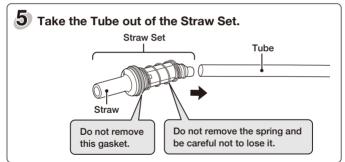


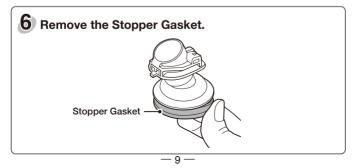

## How to Assemble the Stopper Set

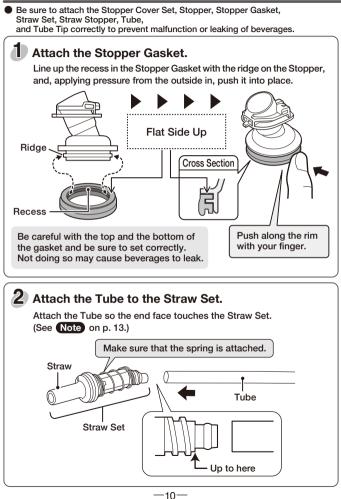


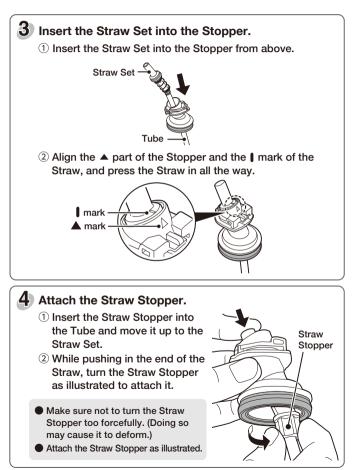

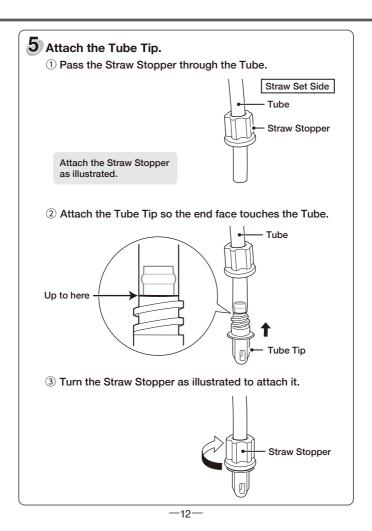


#### Note Attaching the Tube

When attaching the Straw and the Tube Tip to the Tube, attach them firmly so that the end face of the Tube touches them.

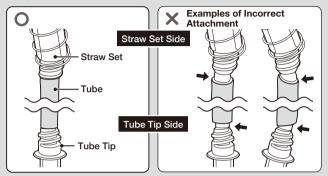

# 6 Attach the Stopper.

Align the opening of the Stopper Cover Set and the tab of the Stopper, and push the Stopper up to attach securely.

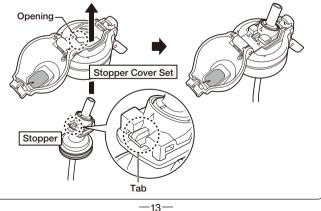

### How to Take Care of Your Bottle:

 Clean the product after each use to prevent odors and mold, and to keep the product sanitary.

 Always disassemble the product before cleaning. (See "How to Disassemble the Stopper Set" on p. 8-9.)

Outside	<ol> <li>Wash with warm water and mild dishwashing liquid</li></ol>
Main Body	using a soft sponge. <li>Rinse, shake a few times and wipe dry.</li> <li>Take apart the Stopper Set before washing and</li>
Stopper Set	drying. <li>Use a small brush sold in stores if necessary.</li>
Inside	<ol> <li>Wash with a sponge brush or similar dipped in warm</li></ol>
Main Body	water and mild kitchen detergent. <li>Then rinse and wipe moisture out to dry.</li> <li>Keeping the inside clean will help prevent odors.</li>
Tote	<ul> <li>Place inside a laundry net and wash in the washing machine on the gentlest cycle. Dry well in a shaded area.</li> <li>If washing the Tote by hand, wash gently in cold or lukewarm water no hotter than 30°C (86°F) and dry thoroughly.</li> <li>Do not dry in a washer-dryer.</li> <li>Do not use detergents, wrinkle releasers, waterproofing sprays, etc. that contain ethanol or alcohol.</li> <li>Do not iron.</li> <li>Do not rub the design or seams of the Tote strongly. Doing so may cause the design to come off or the seams to fray.</li> </ul>
Carrying Strap	<ul> <li>Wipe with a soft cloth soaked in warm water and wrung thoroughly.</li> <li>Remove the Nameplate before wiping. Otherwise, the sticker on the Nameplate may come off.</li> </ul>

### Notes for Handling the Product

Do not use a dishwasher or dish-dryer. Do not boil to sanitize.

- Do not clean using paint thinner, metal wire scrub brushes, scrubbing brushes that include abrasive cleaners, polishing powders, cleansers, melamine sponges, or any similar items.
- Do not use chlorine-based bleach. In addition, do not use any kind of bleach, even non-chlorine-based, to clean the outside of the Main Body. It may damage the paint, print, or stickers on the Main Body.
- The product is washable, but do not soak it in water for an extended period of time.

• Wipe moisture off thoroughly to prevent water stains or rusting.

 If the product is not going to be used for an extended period, wash thoroughly with cold or lukewarm water and dry well. Store the product away from high temperatures and humidity.

High temperatures and humidity may damage the product.

#### To Remove Rust Spots and Water Stains:

You may find rust spots or water stains caused by impurities in the water. To remove these stains, fill the bottle with hot water with 10% vinegar and let it stand for 30 minutes to an hour without attaching the Stopper Set, then wash the interior thoroughly. (See "How to Take Care of Your Bottle" on p. 14, 15.)

#### To Remove Coffee and Tea Stains:

To remove coffee and tea stains from the interior and the Stopper Set, we recommend using Zojirushi's cleaning detergent SB-ZA01E . (Sold separately.) Always remove the Stopper Set when using SB-ZA01E."

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or its surface becomes rough, please replace them for optimum performance. The Straw Set, Straw Stopper, Tube, Tube Tip, Stopper and Stopper Gasket may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.

Model No.	Capacity	Weight	Weight	Cold Retention (Below)
		With Tote	Without Tote	6 hrs.
SD-CAE50	0.52 liter	0.36 kg	0.27 kg	9°C(48°F)
	(18 oz.)	(13 oz.)	(10 oz.)	@ 6 hrs.

Cold Retention Testing Conditions:

At a room temperature of  $20^{\circ}C\pm 2^{\circ}C$  ( $68^{\circ}F\pm 4^{\circ}F$ ), the Main Body is filled with cold water up to the level illustrated in **Beverage Level** on p. 3, and left standing in an upright position.

For cold retention, once the cold water reaches  $4^{\circ}C\pm 1^{\circ}C$  ( $39^{\circ}F\pm 2^{\circ}F$ ), the temperature is measured after 6 hours.

Materials: Inner Liner Exterior Mouth Stopper Straw Lid Tube Tip Straw Stopper Tube Gasket Stainless Steel (Nonstick Coated) Stainless Steel (Acrylic Resin Painted) Polypropylene Polypropylene Polypropylene Polypropylene Polypropylene Sillicone Sillicone

Manufacturer: Zojirushi Corporation Address: 1-20-5 Tenma, Kita-ku, Osaka 530-8511, Japan