


Household Use Only

STAINLESS MUG

Model SM-I

Instruction Manual

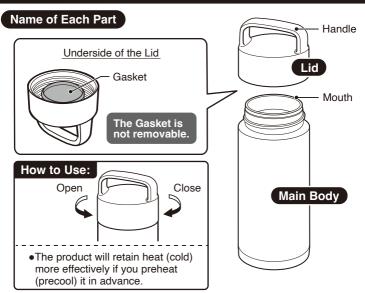

- Please read these instructions before use, and keep for future reference.
- The illustrations used in this instruction manual may differ from the actual product you have purchased.

Important Safeguards Be sure to follow the instructions.

These WARNINGS and CAUTIONS are intended to prevent property damage or personal injury to you and others.

■The degree of danger or damage by the misuse of the product is indicated as follows:



Indicates risk of serious injury or death.

⚠ CAUTION

Indicates risk of injury or property damage if mishandled.

■ Prohibited or required actions are indicated as follows:

 $\overline{\mathbb{Q}}$

Indicates a prohibited operation.



Indicates a requirement or instruction that must be followed.

↑ WARNING



Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

↑ CAUTION



When using filled with a hot beverage:

- . Be careful, as the hot beverage may cause scalding.
- Drink slowly without tilting the product suddenly.
- . When pouring hot beverages into the Main Body, be careful not to let it tip over.



Do not attach parts other than those specifically designed for this product.

Do not disassemble the product.

Do not shake the product forcefully.

Do not use the product if its thermal insulation performance has deteriorated.

Do not use if water enters the Vacuum Laver.

Drinking the water that seeps out from the Vacuum Layer may cause illness.

Vacuum Laver



Do not use this product for other than storing and keeping beverages hot or cold.

This product is designed to be drunk directly, so the beverage may splash if it is used for pouring.

Do not place near heat sources such as gas stoves, ovens, and heaters, as doing so may cause burns or product malfunction.

Do not heat in a microwave, as doing so may cause sparks.

Avoid dropping or hitting against hard surfaces.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters, or IH cooking devices, as doing so may cause a fire or malfunction.

Do not drink out of the product while driving.

Never fill the product with the following:

- Dry ice or carbonated drinks
- Liquids high in sodium such as soup or Kobu-cha
- · Dairy products or fruit juice
- Fruit pulp or tea leaves

When holding the product by the Handle to carry it:

- Do not swing the product around by the Handle.
- Do not let the Lid turn in the open direction.
- Do not hang by the Handle using items such as clasps or strings.

Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects, as this may cause the design to come off.

Do not remove the sticker on the bottom of the Main Body.





Fill the Main Body only up to the level shown in the illustration.



Always close the Lid securely.

Make sure that there is no beverage leakage before using the product.

Before using a vehicle drink holder, make sure that the product sits securely inside the drink holder.

Consume beverages within the same day. Leaving beverages for a long time may cause them to spoil. This may also cause

the beverage to come out, or the Lid to burst

Thoroughly clean the inside and Mouth of the Main Body, and the Lid after every use. Be particularly careful after filling the product with sports drinks.

Break large ice cubes into smaller pieces before adding them, as failure to do so may cause deformation of the Main Body and leakage.

Place the product vertically when carrying it in a bag to prevent leakage or condensation.

Place the Lid as illustrated when it is wet.

Placing it upright with the Handle on the bottom may cause it to fall over and lead to stains.



Note: The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction

How to Take Care of Your Product:

- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.
- · Clean the product after each use to prevent odors and mold, and to keep the product sanitary.

How to Take Care of Your Product: continued

When Cleaning Your Product:

Please follow these instructions to prevent damage to the product:

- Do not boil or use a dishwasher or dish-dryer.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product.
 Zojirushi's designated cleaning detergent SB-ZA01E may be used to clean the interior of the Main Body and the Lid.
- The Main Body is fully washable, but do not soak it in water for an extended period of time.
- · Avoid damaging the inside of the Main Body when cleaning.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

How to Clean

- ① Wash using warm water and mild dishwashing liquid with a sponge. Use a small brush or a soft sponge brush with a handle to wash parts that are difficult to wash.
- ② Rinse, leave to dry so there is no remaining water.
- Streaks or smudges caused by rubbing on the coated portion of the Main Body can be removed using a soft eraser.

How to Clean Rust Spots and Water Stains	Fill the Main Body with hot water with 10% vinegar. Leave for 30 minutes to an hour without attaching the Lid. Wash the interior thoroughly.
Tea, Coffee, and Other Stubborn Stains (Main Body interior and Lid)	Remove the Lid and use Zojirushi's cleaning detergent SB-ZA01E. (Contact Zojirushi Customer Service or your local dealer for further information.)

Replacing the Lid:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Lid may need to be replaced due to time and wear. Please check it about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.