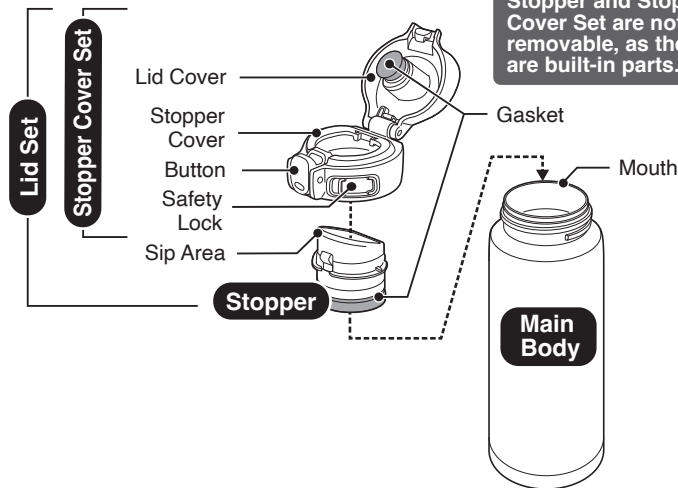 


STAINLESS MUG Model SU-F Instruction Manual
Name of Each Part


- Please read these instructions before use, and keep for future reference.
- The illustrations used in this instruction manual may differ from the actual product you have purchased.

Important Safeguards Be sure to follow the instructions.

These WARNINGS and CAUTIONS are intended to prevent property damage or personal injury to you and others.

■ The degree of danger or damage by the misuse of the product is indicated as follows:


WARNING

Indicates risk of serious injury or death.


CAUTION

Indicates risk of injury or property damage if mishandled.

■ Prohibited or required actions are indicated as follows:



Indicates a prohibited operation.



Indicates a requirement or instruction that must be followed.

WARNING

-  Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

CAUTION

Be careful when using filled with a hot beverage, as it may cause scalding.

-  • Do not open the Lid Cover with the product close to your face or tilted toward you.
-  • Drink slowly without tilting the product suddenly.
Otherwise the beverage may gush out.
- When pouring hot beverages into the Main Body, be careful not to let it tip over.

-  Do not attach parts other than those specifically designed for this product.

Do not disassemble the product (other than parts designed to be disassembled).

Do not shake the product forcefully.

Do not use the product if its thermal insulation performance has deteriorated.

Do not use if water enters the Vacuum Layer.

Drinking the water that seeps out from the Vacuum Layer may cause illness.

Vacuum Layer



Do not fill the product with the Lid Set attached, as it may overflow.

Do not hold the product by the Lid Set when carrying, as the product may fall and cause injuries.

Do not use this product for other than storing and keeping beverages hot or cold.

This product is designed to be drunk directly, so the beverage may splash if it is used for pouring.

Do not heat in a microwave, as doing so may cause sparks.

Do not place near heat sources such as gas stoves, ovens, and heaters, as doing so may cause burns or product malfunction.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters, or IH cooking devices, as doing so may cause a fire or malfunction.

Avoid dropping or hitting against hard surfaces.

Do not drink out of the product while driving.

Never fill the product with the following:

- Dry ice or carbonated drinks
- Liquids high in sodium such as soup or Kobu-cha
- Dairy products or fruit juice
- Fruit pulp or tea leaves

Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects, as this may cause the design to come off.

Do not remove the sticker on the bottom of the Main Body.



 


Fill the Main Body only up to the level shown in the illustration.

Drink Level

Leave a bit of space below the rim (part A).

Inside of the Main Body



Always make sure that the parts are attached during use.

Make sure that there is no beverage leakage before using the product.

Before using a vehicle drink holder, make sure that the product sits securely inside the drink holder.

Consume beverages within the same day.

Leaving beverages for a long time may cause them to spoil. This may also cause the beverage to come out, or the Lid Set to burst.

Thoroughly clean the inside and Mouth of the Main Body, and the Lid Set after every use. Be particularly careful after filling the product with sports drinks.

Break large ice cubes into smaller pieces before adding them, as failure to do so may cause deformation of the Main Body and leakage.

Place the product vertically when carrying it in a bag to prevent leakage or condensation.

After adding hot beverages, the pressure inside the product may rise, making it difficult to remove the Lid Set. If that happens, open the Lid Cover once, then remove the Lid Set.

If the Lid Cover is left closed for an extended period, the pressure inside the product may decrease and make it difficult to open the Lid Cover. If this occurs, detach the Lid Set to open it.

 
Note: The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction.

How to Use:

- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.


Locking and Unlocking the Safety Lock

- Close the Lid Cover and lock.
- Do not close the Lid Cover when the Safety Lock is locked.

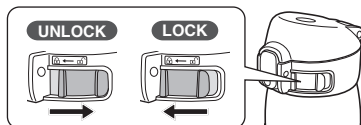

Opening and Closing the Lid Cover

 - How to open

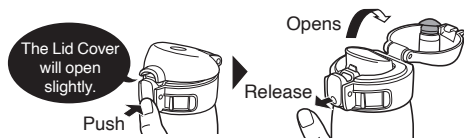


- How to close



How to Disassemble the Lid Set:

Remove the Stopper.

 
Hold the Lid Set and press on the back of the Sip Area (parts indicated by the arrows ↓) to remove the Stopper.

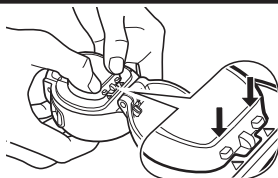

How to Assemble the Lid Set:

Attach the Stopper.

 Align the ▽ mark on the Stopper Cover Set with the Tab of the Stopper and attach the Stopper securely by pushing it up until both the front and back of the Stopper click in place.

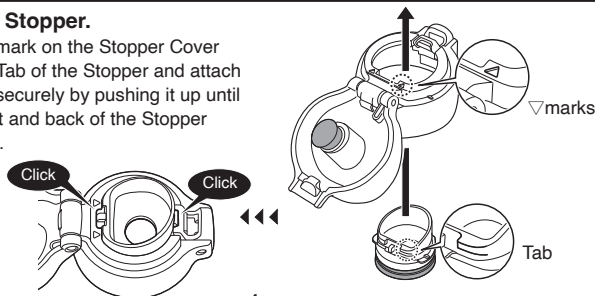

How to Take Care of Your Product:

- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.
- Always disassemble the product before cleaning.

When Cleaning Your Product:

Please follow these instructions to prevent damage to the product:

- Do not boil.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product.
Zojirushi's designated cleaning detergent SB-ZA01E may be used to clean the interior of the Main Body and the Lid Set.
- The Main Body is fully washable, but do not soak it in water for an extended period of time.
- Avoid damaging the inside of the Main Body when cleaning.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

How to Clean

Hand wash is recommended for extended use.

- ① Wash using warm water and mild dishwashing liquid with a sponge.
Use a small brush or a soft sponge brush with a handle to wash parts that are difficult to wash.
 - ② Rinse, leave to dry so there is no remaining water.
- If streaks, smudges or color transfer caused by rubbing on the coated portion of the Main Body cannot be removed by the above method, try using a soft eraser. If it still cannot be removed, rub using warm water and mild dishwashing liquid with a sponge.

How to Take Care of Your Product: continued

If using a dishwasher:

- Please review the instruction manuals for the dishwasher and detergent before using.
- Do not use a commercial dishwasher or dish dryer.
- Do not drop the Lid onto the heating element.
Doing so may cause fuming or deformation.
- Do not touch the product immediately after washing and drying as it may be hot.
- Do not press the Main Body firmly against the rack.
Doing so may cause damage or deformation of the Main Body, or the coating, printing, and/or stickers to peel off.
- Do not wash and dry the Lid with the Lid Cover closed.
Doing so may cause deformation, etc.
- Do not forcefully insert the Lid into the rack or wash and dry the Lid with a heavy object on top of it.
Doing so may cause deformation, etc.
- Parts of the exterior of the Main Body may become lightened from cleansers or water stains. If this occurs, pour hot water over the discolored portion, and then immediately wipe it with a dry, soft cloth.
Be careful not to scald yourself.

How to Clean Rust Spots and Water Stains

- ① Fill the Main Body with hot water with 10% vinegar.
- ② Leave for 30 minutes to an hour without attaching the Lid Set.
- ③ Wash the interior thoroughly.

Tea, Coffee, and Other Stubborn Stains (Main Body interior and Lid Set)

Remove the Lid Set and use Zojirushi's cleaning detergent SB-ZA01E. (Contact Zojirushi Customer Service or your local dealer for further information.)

Replacing the Lid Set:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Lid Set may need to be replaced due to time and wear. Please check it about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.