



 
ZOJIRUSHI

Stainless Steel Food Jar

Household Use Only INSTRUCTION MANUAL Model SW-EZE

Name of Each Part


Side Bowl Set

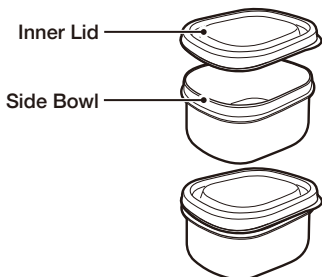

Tote



 Food Jar Set

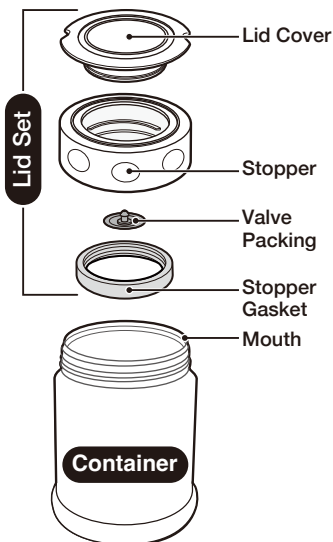

- Be sure that all parts are correctly placed or installed before each use.

Please read before use. Keep these instructions for future references.

Important Safeguards

Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

Mishandling may cause injury or scalding.

Do not place near heat sources such as gas stoves, ovens and heaters.

Doing so may cause deformation or discoloration of the product.

Avoid modifying or disassembling the product.

Doing so may cause accidents or damage the product.

This product is for keeping foods and beverages hot or cold. Do not use it for any other purposes.

Always use with the Valve Packing and Stopper Gasket attached.

Contents may leak and/or cause scalding.

Always close the Lid Set and the Inner Lid securely when using.

Foods and beverages may leak and cause scalds or stain clothes.

Do not use the Container if it loses its heat retention properties.

The outside of the Container may become very hot if hot foods or beverages are poured inside.

When containing hot foods or beverages:

- Avoid shaking the Container.
Doing so may cause scalds or injury.
- Be careful to avoid scalding yourself when using the Container.
Due to its vacuum insulation, the outside of the Container will not become hot, while hot foods and beverages will remain very hot for many hours. Please eat or drink with caution.
- Always use with the Lid Cover in place.
The interior of the Lid Set may become hot and cause scalds or injury.

Avoid swinging this product by the Tote Handle.

Doing so may cause injury or damage the product.

Avoid carrying the Tote by the Zip.

Doing so may damage the product.

Avoid laying this product on its side.

Doing so may cause the contents to leak.

Avoid leaving in direct sunlight for an extended period.

Doing so may cause discoloration of the product.

Do not place soups in the Side Bowl.

These may leak out.

Avoid using this product while driving.

 
Doing so may cause scalds or stain the interior of your car or clothes. Attempting to use while driving may also cause serious accidents.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters or IH hot plates, or other IH cooking devices.

Doing so may cause a fire or malfunction.

Fill the Container only up to the level shown in the illustration.

Overfilling may cause the contents to overflow when the Lid Set is tightened or to leak out afterwards, and may be dangerous.

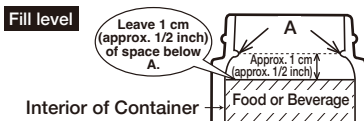

Do not remove the sticker from the bottom of the Container.

Doing so may cause rust, holes or other damage.



- Follow these instructions to prevent scalding, deterioration and discoloration of foods and beverages, as well as malfunction and staining of the product.

Always make sure cold soups or foods and beverages containing dairy products are cooked (heated) through before placing them in the Container.

Do not place foods or beverages containing dairy products in the Side Bowl.

Side dishes that have been heated should be allowed to cool before being placed in the Side Bowl.

Hot foods kept in a sealed Side Bowl may spoil or deform the Inner Lid and leak out.

Do not heat the Container in a microwave oven.

Doing so may cause sparks, deform or discolor the Container.

Consume foods or beverages as soon as possible (within 6 hours), and do not leave leftovers inside.

Leftover contents may spoil.

When microwaving foods in the Side Bowl:

- Remove the Inner Lid before heating.
The Inner Lid may deform or become damaged.
- Do not use the oven function or grill function of a combination microwave oven.
If you have just used the oven function or grill function to heat other food, avoid microwaving the Side Bowl before the inside of the cooking chamber has cooled.
Doing so may deform or damage the Side Bowl.
- Avoid heating an empty Side Bowl in a microwave oven.
Doing so may deform or damage the Side Bowl.
- Do not heat foods with a high oil or sugar content for an extended period.
High temperatures may damage or deform the Side Bowl.

Never put the following into the Container:

- Dry ice and carbonated drinks
Contents may spray out or the pressure may cause the Lid Set to burst, causing injuries.
- Fruit juice and other uncooked foods
If left inside the Container for an extended period, these may spoil and give off gases. A buildup of pressure from these gases within the Container may make food or beverages spray out or burst the Lid Set.

Avoid using to keep food hot or cool for extended periods. Wash Container, Stopper, Stopper Gasket and Valve Packing immediately after use.

If you are away from home and thorough cleaning is not possible, rinse the inside of the Container with water immediately after use.

- Although the liner is made of 18/8 stainless steel, salt from foods such as miso soup, other soups and sports drinks may cause rust resulting in loss of thermal insulation.
- A buildup of pressure inside the Container from gases given off by a beverage as it spoils may make the Lid Set fly off or burst when it is opened, causing foods or beverages to spray out and cause injury.
- Not doing so may cause decay, mold, odor or discoloration. It may also cause leaks.

Warnings & Cautions

Store the Tote in a well-ventilated place.

High humidity may cause the fabric to wrinkle.

Wash Container, Side Bowls, Packing and Gasket thoroughly after use.

Failure to wash them may cause odors and discoloration.

After washing the Lid Set, remove all water from the parts by shaking them repeatedly and wiping them before reassembly.

Droplets of water remaining on the Lid Cover or Lid Set may leak out. (See p. 6 for disassembly instructions.)

Avoid carrying the Container by the Lid Set.

Dropping the Container may cause injury.

Avoid dropping or hitting against hard surfaces.

Damage to the plastic or stainless steel surface of the product may reduce its ability to retain heat.

Do not strongly rub the design on the outside of the Container.

It may come off.

Do not allow a hot kettle to touch the mouth of the Container.

The Container may tip over, causing scalds, or damaging or deforming the product.

Do not place cans, bottles, etc. inside the Container.

These may deform or damage the Container.

Break up large ice cubes into smaller pieces before placing them in the Container.

Forcing large cubes into the Container may deform or damage it.

Foods with strong odors or colors (curry, kimchee and pickled daikon radish, or shiso, spinach, carrots and other brightly colored vegetables) may cause the product to absorb odors or discolor the Lid Set and Side Bowls.

Wrap such foods in plastic film or silicon cup before placing them in the Side Bowl.

- Stand the Container upright when opening or closing the Lid Set.
- When carrying the product in a bag, keep it upright to prevent any leaking of contents.

 


Filling the Container with hot foods or beverages may cause buildup of pressure within it, making the Lid Set difficult to remove. In this case, remove the Lid Cover and push a small, rounded object such as the back of a toothpick into the hole in the center to release the pressure, taking care not to tear the Valve Packing. (See illustration on the right.)

<Center of the Stopper>

Toothpick or similar

2 holes

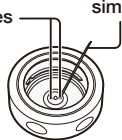

The rattling noise that may be heard when the Container is shaken comes from the copper or aluminum foil in the vacuum insulation to increase heat (cold) retention and does not indicate a malfunction.

- The illustrations used in this instruction manual may vary from the actual product you have purchased.

 
Instructions for Use

- Before using, wash the Side Bowl Set, Lid Set, and interior of the Container thoroughly in accordance with the care instructions.

- To prevent foods or beverages from leaking, ensure that the Valve Packing and Stopper Gasket are correctly inserted before using the Container.
- Turn the Container upside down to check that there are no leaks.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.

1 Remove the Lid Set from the Container

Without removing the Lid Cover, remove the Lid Set by twisting it in the direction of the arrow.

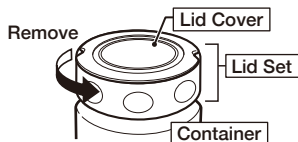


2 Preheat (Precool)

- ① For better heat/cold retention, pre-heat/pre-cool the Container by pouring a small amount of hot water/cold water into it and letting it stand for 1-2 minutes.
- ② After preheating/precooling, discard the hot water/cold water and wipe off any moisture.

3 Fill the Container

 - Overfilling the Container may cause the contents to overflow when the Lid Set is tightened or leak out afterwards. Never fill the Container above the level shown in the illustration.

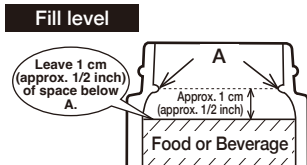

- Wipe off any food or beverage adhering to A (to prevent leakage of contents after closing the Lid Set).

 
4 Close the Lid Set

Close the Lid Set by twisting it in the direction of the arrow.



5 Place Side Dishes in the Side Bowl(s)

- ① Open the Side Bowl by pushing up the Inner Lid starting from the Tab.
- ② Place the side dish in the Side Bowl. Line the Inner Lid up with the edges of the Side Bowl, then push the Inner Lid on while pressing the air out of the Side Bowl.

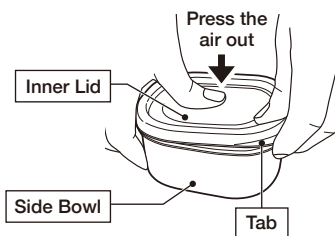


6 Place the Container and Side Bowl(s) in the Tote

- 1 Place the Food Jar Set and Side Bowl Set inside the Tote.

- Place the Food Jar Set and Side Bowl Set(s) flat in the Tote with the Lid Set and Inner Lid(s) facing up.

 
- 2 Fully close the zipper.

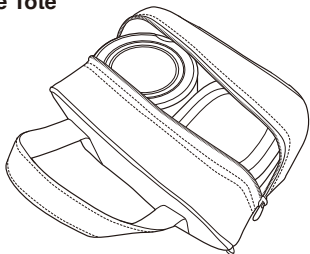

Disassembling the Lid Set


1 Remove the Lid Set from the Container

 2 Twist off the Lid Cover as shown in the illustration

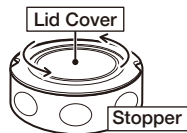

3 Remove the Stopper Gasket

 
- When removing the Stopper Gasket or Valve Packing using fingernails or other sharp objects, take care not to damage the Stopper Gasket or Valve Packing.

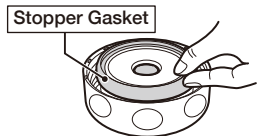

4 Remove the Valve Packing

The Valve Packing is fitted in the center of the Stopper. Remove it using finger and thumb as shown in the illustration.

 - The Lid Set has a hollow structure for thermal insulation. Remove the Lid Cover to clean inside the cavity.

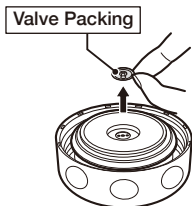

Assembling the Lid Set

1 Attach the Stopper Gasket

Line up the recess in the Stopper Gasket with the ridge on the Stopper, and, applying pressure from the outside in, push it into place.

Avoid attaching the Stopper Gasket upside down. (Doing so may cause food or beverages to leak out.)

Always attach with this part facing upwards.

Stopper Gasket

Recess

Ridge

Flat surface of the Stopper Gasket faces down

Applying even finger pressure from the outside in, attach the Stopper Gasket.


2 Attach the Valve Packing

As shown in the illustration, push the projection on the Valve Packing securely into the hole in the center of the Stopper.

- Foods or beverages may leak if the Valve Packing is not correctly attached.


※ There are 3 holes on the Stopper. Please insert the projection into the center hole.

 ★ Foreign matter or dirt stuck to the underside or projecting part of the Valve Packing may cause foods and beverages to leak.

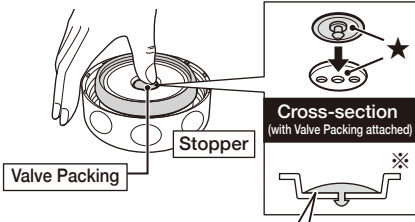

3 Fit the Lid Cover

 As shown in the illustration, fit the Lid Cover by twisting it on.

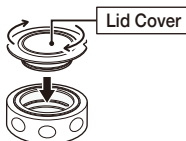

Care of Your Product

- To ensure hygiene, clean the product after every use.
- Always disassemble the product before cleaning it. (See p. 6.)

Exterior of Container

- ① Wash with a sponge dipped in lukewarm water and mild kitchen detergent.
- ② After rinsing, shake several times and thoroughly wipe dry.

Care of Your Product (continued)

Interior of Container

- ① Wash with a sponge brush or similar dipped in warm water and mild kitchen detergent.
 - ② After rinsing, shake several times and thoroughly wipe dry.
- Keeping the inside clean will help prevent odors.

Lid Set Side Bowl Set

- ① Wash in lukewarm water and mild kitchen detergent.
 - ② After rinsing, shake several times and thoroughly wipe dry.
- Always disassemble the Lid Set (Lid Cover, Stopper, Valve Packing, Stopper Gasket) before cleaning it. Residual foreign matter or dirt may cause foods and beverages to leak.
 - Dry the Lid Set with the Lid Cover off.
 - After disassembling the Lid Set for cleaning, reassemble it correctly to prevent foods and beverages from leaking.

Tote

- Place inside a laundry net and wash in the washing machine on the gentlest cycle. Dry well in a shaded area.
- If washing the Tote by hand, wash gently in cold or lukewarm water no hotter than 30°C (86°F) and dry thoroughly.
 - Do not dry in a washer-dryer.
 - Do not use detergent containing ethanol or other alcohol.

Taking Care of Your Product:

- Do not boil to sanitize. Do not use a dishwasher or dish-dryer.
- Do not use bleach on the exterior of the Container.

Doing so may remove paint, print or stickers from the Container.

- If the product is not going to be used for an extended period, wash thoroughly with cold or lukewarm water and dry well. Store the product away from high temperatures and humidity.
These may damage the product.
- Do not use thinner, wire wool, scouring pads, polishing powder, cleansers, etc. to clean the product.
- Do not use chlorine bleach.
- The product is washable, but do not soak it.
- After washing the Container, always wipe moisture off thoroughly to prevent water stains or rust.
- Always wipe off any water between the Lid Cover and the Stopper.

Removing Rust Spots and Water Scale:

During use of this product, hardness or impurities in water may cause rust spots or water scale. To remove these, fill the Container with hot water with approximately 10% vinegar and let stand with the Lid Set off for 30 minutes to an hour, then wash the interior thoroughly. (See "Care of Your Product", p. 7-9.)

Treating Absorbed Odors:

If the product is left unwashed for an extended period or is not thoroughly washed, it may absorb an unpleasant odor, and discoloration of the plastic parts may occur. Treat any unpleasant odor absorbed by the product as follows.

| | |
|---|--|
| Container, Lid Cover, Stopper, Side Bowl Set | After washing thoroughly, wipe off moisture and leave in a well-ventilated place in sunlight to dry for 1-2 hours. If this does not remove the odor, we recommend using Zojirushi's cleaning detergent SB-ZA01E. Always remove the Lid Set when using SB-ZA01E. Contact Zojirushi Customer Service or your local dealer for further information. |
| Valve Packing, Stopper Gasket | Boil for 10 minutes in water with approximately 10% vinegar. After rinsing, wipe off moisture thoroughly to dry. |

Replacing the Valve Packing and Stopper Gasket:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or its surface becomes rough, please replace them for optimum performance. The Valve Packing and Stopper Gasket may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.

SPECIFICATIONS:

Product: STAINLESS STEEL FOOD JAR

| Model No. | Capacity | Weight With Tote | Weight Without Tote | Heat Retention (Above) | Cold Retention (Below) |
|-----------|------------------------|---------------------|------------------------|---------------------------|---------------------------|
| SW-EZE35 | 0.35 liter (12 oz.) | 0.50 kg (18 oz.) | 0.38 kg (14 oz.) | 57°C (135°F) @ 6 hrs. | 12 °C (54°F) @ 6 hrs. |

■ At a room temperature of 20°C ± 2°C (68°F ± 4°F), the Container is filled to below the Lid Set with hot or cold water and left standing in an upright position. For heat retention, once the hot water reaches 95°C ± 1°C (203°F ± 2°F), the temperature is measured after 6 hours. For cold retention, once the cold water reaches 4°C ± 1°C (39°F ± 2°F), the temperature is measured after 6 hours.

Materials:

| | |
|------------------|---|
| Inner Liner | Stainless Steel |
| Exterior | Stainless Steel (Acrylic Resin Painted) |
| Mouth | Stainless Steel |
| Stopper | Polypropylene |
| Gasket & Packing | Silicone |
| Side Bowl | Polypropylene |
| Inner Lid | Polyethylene |

| Side Bowl Set | | |
|------------------------|-----------------------|------------------|
| Capacity | | |
| Side Bowl | 0.3 liter (10 oz.) | |
| Temperature Resistance | | |
| Side Bowl | 140 °C (284°F) | -20 °C (-4°F) |
| Inner Lid | 70 °C (158°F) | -20 °C (-4°F) |

Manufacturer: Zojirushi Corporation

Address: 1-20-5 Tenma, Kita-ku, Osaka 530-8511, Japan