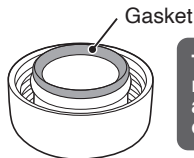


Name of Each Part
Underside of the Lid


The Gasket is not removable as it is a one-piece Lid.

Lid
Mouth
Main Body
How to Use:


- The product will retain heat (cold) more effectively if you preheat (precool) it in advance.

※ Double-wall stainless steel vacuum insulated construction

- Please read these instructions before use, and keep for future reference.
- The illustrations used in this instruction manual may differ from the actual product you have purchased.

Important Safeguards Be sure to follow the instructions.

These **WARNINGS** and **CAUTIONS** are intended to prevent property damage or personal injury to you and others.

■ The degree of danger or damage by the misuse of the product is indicated as follows:


WARNING

Indicates risk of serious injury or death.


CAUTION

Indicates risk of injury or property damage if mishandled.

■ Prohibited or required actions are indicated as follows:



Indicates a prohibited operation.



Indicates a requirement or instruction that must be followed.

WARNING

-  **Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.**


CAUTION

-  **When using filled with hot foods or beverages:**
- Drink or eat slowly without tilting the Main Body suddenly.
 - When opening the Lid Set, do it slowly with the Main Body placed on a flat surface.

- | | |
|---|--|
|  Do not attach parts other than those specifically designed for this product. | Avoid dropping or hitting against hard surfaces. |
| Do not disassemble the product. | Do not place cans, bottles, etc. inside the Main Body. |
| Do not shake the product forcefully. | Do not drink out of the product while driving. |
| Do not use the product if its thermal insulation performance has deteriorated. | Never put the following into the product: <ul style="list-style-type: none">• Dry ice or carbonated drinks• Perishable fresh foods (uncooked meat, seafood, dairy products, eggs, etc.) |
| Do not use if water enters the Vacuum Layer. <p>Drinking the water that seeps out from the Vacuum Layer may cause illness.</p>  | Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects, as this may cause the design to come off. |
| Do not forcibly remove the Gasket from the Lid. It is not removable.
Do not use if the Gasket is damaged or coming off. | Do not remove the sticker on the bottom of the Main Body.  |
| Do not hold the product by the Lid when carrying, as the product may fall and cause injuries. | Do not heat the product from the outside, even when the Lid is difficult to remove. <p>Doing so may increase the pressure inside the Main Body and cause the Lid to fly off; damage and burst the Lid; or cause foods or beverages to spray out; which could all result in injury.</p> <ul style="list-style-type: none">• Use a non-slip soft material such as rubber gloves and open with the product at an upright position. |
| Do not use this product for other than storing and keeping foods and beverages hot or cold. | Avoid leaving in direct sunlight for an extended period. |
| Do not place near heat sources such as gas stoves, ovens, and heaters, as doing so may cause deformation or discoloration of the product. | Do not place objects directly on top of the Lid. These may absorb heat from the Lid. |
| Do not heat in a microwave, as doing so may cause sparks. | |
| Do not place near open flames (from gas stoves, etc.), on top of electric heaters, or IH cooking devices, as doing so may cause a fire or malfunction. | |

! Fill the Main Body only up to the level shown in the illustration.

Fill level

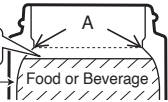

Always make sure cold soups or foods and beverages containing dairy products are cooked (heated) through before placing them in the Main Body.

Always close the Lid securely.

Make sure food or beverage does not leak before using the product.

Consume food or beverages as soon as possible (within 6 hours) and finish them in one sitting.

Follow these instructions when placing salads/fruit in the Main Body.

- Use fresh (just purchased) salads/fruit. Wash well under running water before using.
- Wash hands thoroughly before preparing foods.
- Avoid using kitchen knives and chopping boards which have been used for meat or fish. If you do use such knives or boards for salads/fruit, disinfect them beforehand.
- Cut salads/fruit and cool well in the refrigerator before placing in the Main Body.

Thoroughly clean the Main Body and the Lid immediately after every use. In particular, placing foods and beverages with strong odors in the Main Body may cause odor transfer.

To prevent leakage, place the product vertically when carrying it in a bag and be careful that it does not tip over.

Note: The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction.

How to Take Care of Your Product:

- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.
- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.

When Cleaning Your Product:

Please follow these instructions to prevent damage to the product:

- Do not boil.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product. Zojirushi's designated cleaning detergent SB-ZA01E may be used to clean the interior of the Main Body and the Lid.
- The Main Body is fully washable, but do not soak it in water for an extended period of time.
- Avoid damaging the inside of the Main Body when cleaning.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

How to Take Care of Your Product: continued

How to Clean

Hand wash is recommended for extended use.

- ① Wash using warm water and mild dishwashing liquid with a sponge.
Use a small brush or a soft sponge brush with a handle to wash parts that are difficult to wash.
- ② Rinse, leave to dry so there is no remaining water.
 - If streaks, smudges or color transfer caused by rubbing on the coated portion of the Main Body cannot be removed by the above method, try using a soft eraser. If it still cannot be removed, rub using warm water and mild dishwashing liquid with a sponge.

If using a dishwasher:

- Please review the instruction manuals for the dishwasher and detergent before using.
- Do not use a commercial dishwasher or dish dryer.
- Do not drop the Lid onto the heating element.
Doing so may cause fuming or deformation.
- Do not touch the product immediately after washing and drying as it may be hot.
- Do not press the Main Body firmly against the rack.
Doing so may cause damage or deformation of the Main Body, or the coating, printing, and/or stickers to peel off.
- Parts of the exterior of the Main Body may become lightened from cleansers or water stains. If this occurs, pour hot water over the discolored portion, and then immediately wipe it with a dry, soft cloth.
Be careful not to scald yourself.

How to Clean Rust Spots and Water Stains	① Fill the Main Body with hot water with 10% vinegar. ② Leave for 30 minutes to an hour without attaching the Lid. ③ Wash the interior thoroughly.
What to Do If the Product Absorbs Odors	Wash thoroughly and dry with a soft cloth. Place in the sun and let dry for 1-2 hours.

Replacing the Lid:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Lid may need to be replaced due to time and wear. Please check it about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.