 


Operating Instructions

Please read these operating instructions carefully
before use, and keep for future reference.

Thermal Food Holder RDS-400/600

Major parts

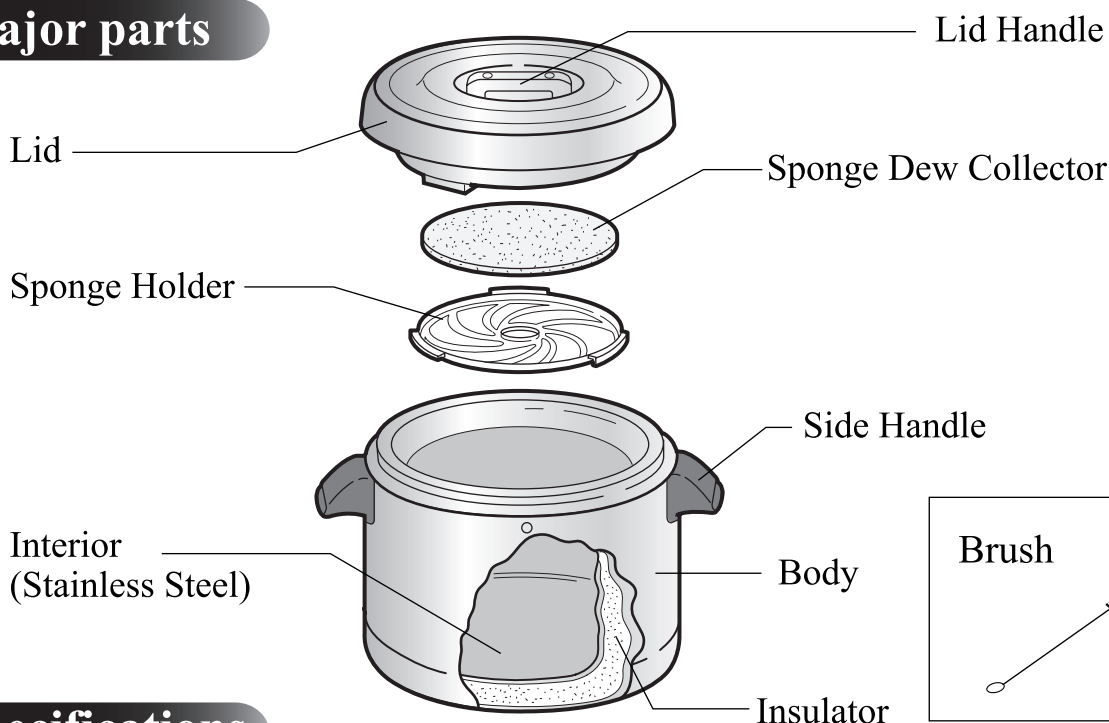

Specifications

Product Name	Thermal Food Holder	
Model No.	RDS-400	RDS-600
Pattern	Stainless Steel	Stainless Steel
Capacity by Volume	2.9 Gallons	4.3 Gallons
Capacity by Rice	22.2 cups	33.3 cups
Heat Retention	80°C (176°F)	82°C (180°F)
Dimensions (W x D x H)	18 x 15 x 11 in.	18 x 15 x 14 in.
Weight	4.8 Kg (10.6 lbs.)	5.5 Kg (12.1 lbs.)

*Based on hot water at starting temperature of 95°C(203°F) after 5 to 6 hours at room temperature of 20°C (68°F).


How To Use

1 Preheating

1. For better heat retention, fill the Thermal Food Holder with hot water, until it is 1/4 to 1/2 full. Close lid and preheat for five to ten minutes.


Caution : During the preheating, remove the "Sponge Dew Collector" from the lid.

2. After Preheating, discard the water and completely wipe off any moisture.
3. Attach the "Sponge Dew Collector" to lid.

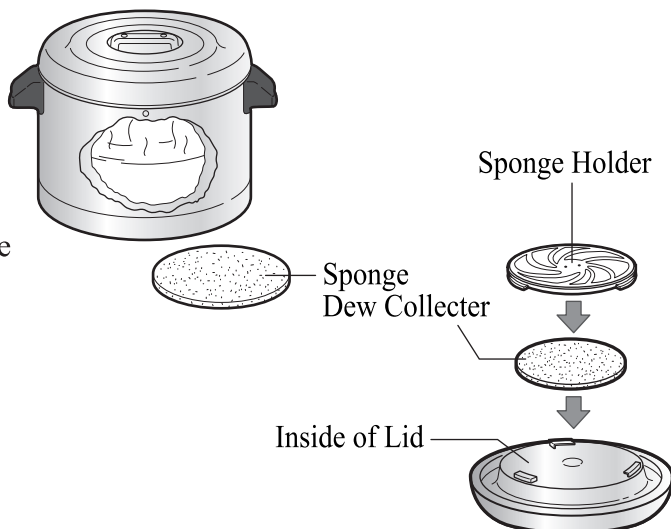

2 Filling the Thermal Food Holder


1. Food should not be compacted into the Thermal Food Holder. Rice should be loosened.
2. Close lid firmly.

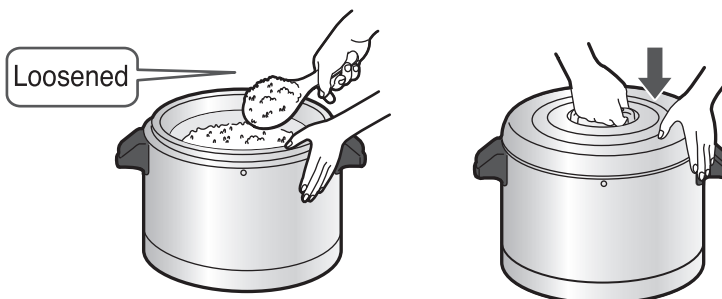

3 Keeping Warm

1. The food inside the Thermal Food Holder should be kept level.
2. Always place the lid firmly.
3. Every 4 to 5 hours, remove the "Sponge Dew Collector" and squeeze lightly to remove excess condensation.

Caution : To avoid damaging the sponge, do not squeeze the sponge too hard.

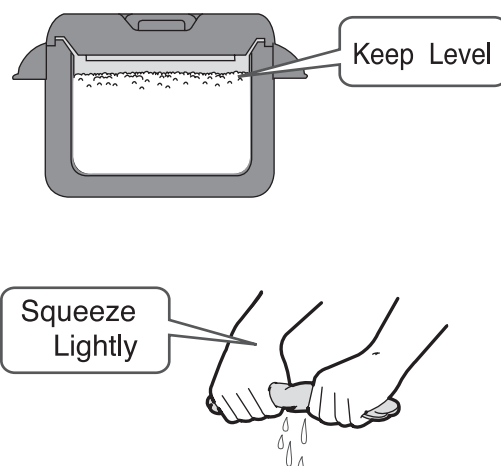

Cleaning

Exterior

1. Wipe with a soft, damp cloth moistened with warm soapy water.
2. Wipe again with a soft, damp cloth moistened with hot water.
3. Wipe off moisture with dry cloth.

Caution : Do not immerse in water.

Interior and Sponge Holder

•Daily cleaning

Fill up the Interior with clean hot water and then dispose after 5 minutes.

- Fill up the Interior with detergent solution and soak the Sponge Holder in the Interior. Then leave the detergent solution in the Interior for 10-15 minutes.
- After the recommended time has passed, clean the inside of the Interior, Sponge Holder and Inside of Lid using a large brush.
- Completely dispose the detergent solution to make the Interior empty.
- Fill up the Interior with clean water and rinse the inside of the Interior, Sponge Holder and Inside of Lid.

Repeat this process until the water becomes clear and clean.

- Let stand until the inside of the Interior, Sponge Holder and Inside of Lid are completely dry.

Caution: Do not wash the Thermal Food Holder in an Automatic Dishwasher/Dryer.

Sponge Dew Collector

- Once daily-remove the "Sponge Dew Collector" and submerge in boiling water for at least 5 minutes.
- Remove from the boiling water carefully as it will be extremely hot.
- Allow to cool slightly and then lightly squeeze out the water.
- And place on a dry flat surface and allow to dry completely before placing back into the Thermal Food Holder.
- A dry "Sponge Dew Collector" is hard and fragile.
Do not twist, squeeze or bend the "Sponge Dew Collector" as it may be damaged or deform.

General Caution

Do not use benzene, solvents, cleaning powders or brushes with hard bristles.

Precautions

1. If the Thermal Food Holder is used for "Sushi Rice", or "Fried Rice", it should be served quickly and cleaned thoroughly after use.
2. Do not place the Thermal Food Holder near gas or electric ovens, stoves, or any source of intense heat.
3. Carry the Thermal Food Holder using both of the side handles.
Do not carry or pull the Thermal Food Holder by one handle.
4. Do not use the Thermal Food Holder as container to wash dishes.

